



# Acer Aspire One 532h-2527 Keyboard Replacement

This guide will show how to remove the keyboard of the Acer Aspire One 532h-2527.

Written By: Jair Burgos



## INTRODUCTION

This guide will show how to remove the keyboard. Removing the keyboard will allow you to replace it or inspect the keys if there is a mechanical problem.

---



### TOOLS:

- [Metal Spudger](#) (1)
-

## Step 1 — Battery



- Press the power button to turn off the netbook.

## Step 2



- Place the netbook bottom-side-up on a flat surface.
- Locate the unlock latch on the top right corner of the back.

## Step 3



- To unlock the battery, slide the lock latch in the direction indicated by the unlocking icon. You should see the orange indicator which means that the latch is unlocked.

## Step 4



- On the opposite side, slide and hold the release latch.
- Gently slide the battery out.

## Step 5 — Keyboard



- Locate the three latches along the top crevice along the top rows of keys and the plastic boarder.

## Step 6



- Using the metal spudger, gently pry each tab releasing the keyboard. Make sure as you move to each new one that the previous one does not reset itself.





## Step 7



- Check for tabs on the side of the keyboard.
- If there are no tabs lift the top of the keyboard.

## Step 8

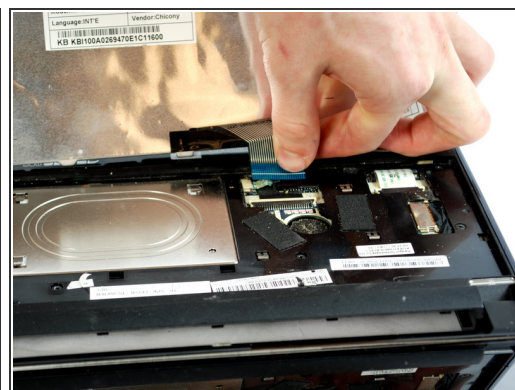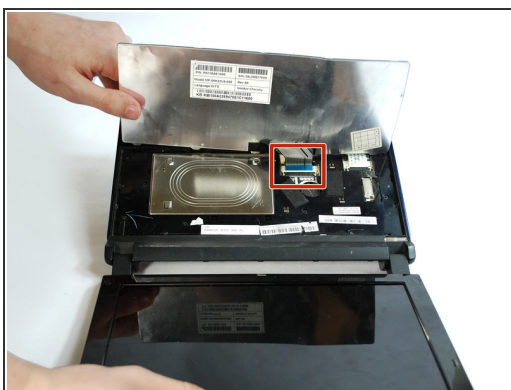

- Locate the sticker-like connector on the back of the keyboard. Carefully unplug it.

## Step 9



- Remove keyboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 01:33:46 AM.